

INSTALLATION GUIDE

SOL SWIVEL BATH SPOUT (MEDIUM)

SYSTEM REQUIREMENTS

To ensure the optimum performance and customer satisfaction please adhere to the following:

- Flush out all pipe work prior to installation.
- Installation should comply with relevant local authority requirements.


Operating Pressures

MINIMUM	N/A
MAXIMUM	1500kPa




Failure to comply with the above will void warranties

HOW TO INSTALL

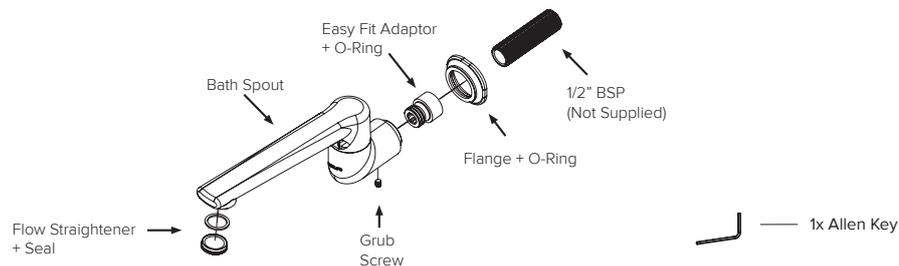


1. Ensure the wingback when fitted is parallel and square to the finished wall lining as shown (fig 1).
2. Measure and cut 1/2" BSP thread to the desired length (use fig 2 as reference).

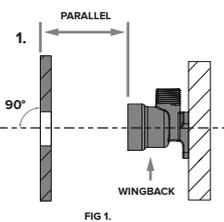

- 3A. After applying the appropriate sealer to the thread hand tighten Easy Fit Adaptor and thread together into the wingback.

- 3B. Using a 12mm allen key, tighten the adaptor ensuring that the front face of the adaptor is 25mm from the finished wall lining as shown (fig 2).

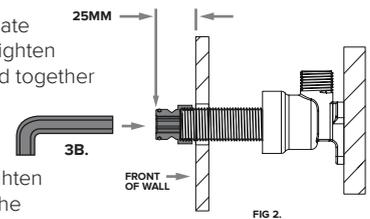

- 4A. Fit flange onto bath spout and then fit onto Easy Fit Adaptor.
- 4B. Align bath spout and flange. Tighten grub screw when aligned.
5. Turn on water supply and check for leaks.

